

Market Umbrella **Care & Maintenance**

 
CARE AND DIRECTIONS

Always close the umbrella in its stand when not in use or in windy weather. It is best to remove the top section of the pole (that holds the umbrella canopy), and lay it flat when not in use. To clean the umbrella cover, rinse with a solution of mild soap and warm water and allow to air dry. Always use an appropriate weighted base with your umbrella, even if it is being used with a table. In the event that you are using the umbrella without a table, you must use a free-standing base that is heavy enough to provide support for the umbrella. Accidental scrapes or scratches on the wooden pole may be touched up using a matching paint color (not included).


ONE (1) YEAR LIMITED WARRANTY ON MANUFACTURING DEFECTS

Warranty does not cover damage due to rust, weather, general use or misuse, commercial use, scratches/paint chips, fading fabric, tangled/torn cords, broken ribs or anything considered general wear and tear. Acts of nature are not covered by manufacturer warranty.


- Proof of purchase is required for all warranty claims
- For parts requests and customer service, please call: 888.529.6524

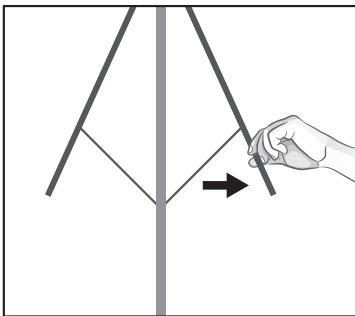

 Before you open up the umbrella, you must pull out the ribs away from the center pole to ease opening

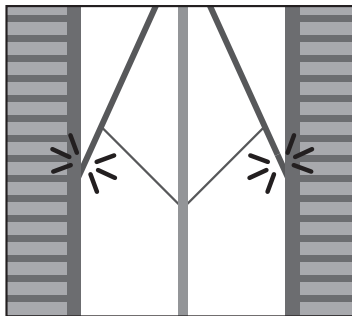

 Watch out for any potential obstacles, when you open up the umbrella

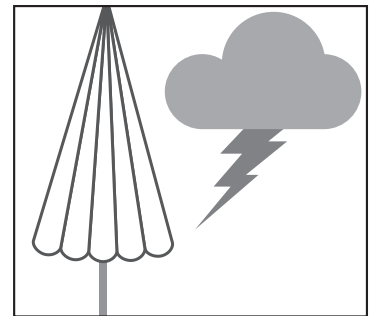

When not in use and under windy or stormy weather, make sure to always close the umbrella and properly store



OUR UMBRELLAS ARE DESIGNED FOR SUN SHADE USE, THEY SHOULD NOT BE USED FOR SHELTER IN INCLEMENT WEATHER OR IN WINDY CONDITIONS. PLEASE KEEP SCREWS AND PARTS OUT OF REACH OF CHILDREN. ADULT ASSEMBLY REQUIRED.

For customer service inquiries & warranty information, please visit us at www.4sgservice.com, email us at sarasota@4sgservice.com or call **1(888)-529-6524** ext.10.